

To Remove SDR-14 Drivers:

Run FTCClean.

Set the PID to F728 and click on “Clean System”

